Quickstart Guide

CANON XA20 CAMCORDER







Step 1: Supply battery to the camcorder with either a battery or a power adapter.



Step 2: Flick the power switch to **CAMERA** to turn on the camcorder.



Step 3: Open the monitor screen.



Step 4: Open the lens hood.



Step 5: Set the shooting mode to *AUTO*.



Step 6: Use the zoom rocker to control the lens zoom.



Step 7:

Press the **START/STOP** button to begin recording and again to end the recording.



Step 8:

To review recorded footage in camera, flick the power switch to **MEDIA** and select the clip for playback by navigating the touch screen. For more help, contact: *lih-sst@mq.edu.au*

